

MEX

คู่มือการใช้งาน

เครื่องอบจาน

DM60E-1

Instruction Manual
Dish Dryer

DM60E-1



MEX

เพื่อการใช้งานอย่างมีประสิทธิภาพสูงสุด ปลอดภัย ทนทาน และการใช้งานที่ยาวนาน

กรุณาอ่านคู่มือการใช้งานเล่มนี้โดยละเอียด

และปฏิบัติตามคำแนะนำอย่างเคร่งครัด ก่อนการใช้งานครั้งแรก

และควรเก็บคู่มือนี้ไว้ตลอดเวลาที่ใช้ใช้งาน

เครื่องอบจาน รุ่น DM60E-1	
ข้อมูลจำเพาะ	2
ส่วนประกอบเครื่องอบจาน	2
คำแนะนำเพื่อความปลอดภัย	3
วิธีการใช้งาน	6
วิธีการแก้ไขปัญหาเบื้องต้น	9

คุณสมบัติ

เครื่องอบจาน MEX สะดวก ใช้งานง่ายและปลอดภัย ด้วยระบบตัดไฟอัตโนมัติเมื่อฝาครอบเปิดระหว่างทำงาน

การใช้งาน: ใช้งานง่ายเพียงวางจานชามที่สะอาด ในชั้นวางแล้วปิดฝาครอบ เลือกคำสั่งการทำงานตั้งเวลา เครื่องจะทำงานทันที


สะดวกสบาย: เพียงตั้งค่าคำสั่งการใช้งานและตั้งเวลาที่ต้องการ เครื่องทำงานด้วยลมร้อน พร้อมไฟ LED จะสว่างขึ้น อบจานแห้งที่อุณหภูมิ 70 องศา +/- 5 องศา

ปลอดภัย: ชั้นวางภาชนะทำจากสแตนเลส สตีล 304 เพื่อความปลอดภัย เมื่อปิดฝาครอบ จะป้องกันไม่ให้แมลงสาบ หนู เข้ามาทำให้ภาชนะสกปรก

เหมาะสำหรับสมาชิกในครอบครัว 4 ถึง 6 คน

ชื่อสินค้า	เครื่องอบจาน
รุ่น	DM60E-1
แรงดันไฟฟ้า	220 โวลต์ 50 เฮิร์ตซ์
กำลังไฟ	260 วัตต์
ความจุ	60 ลิตร
น้ำหนักสุทธิ	5 กก.
อุณหภูมิการทำงาน	70°C +/- 5°C
น้ำหนักสูงสุดที่รับได้ของตะแกรง	15 กก.
ขนาด	495 x 409 x 362 มม.

ส่วนประกอบเครื่องอบจาน

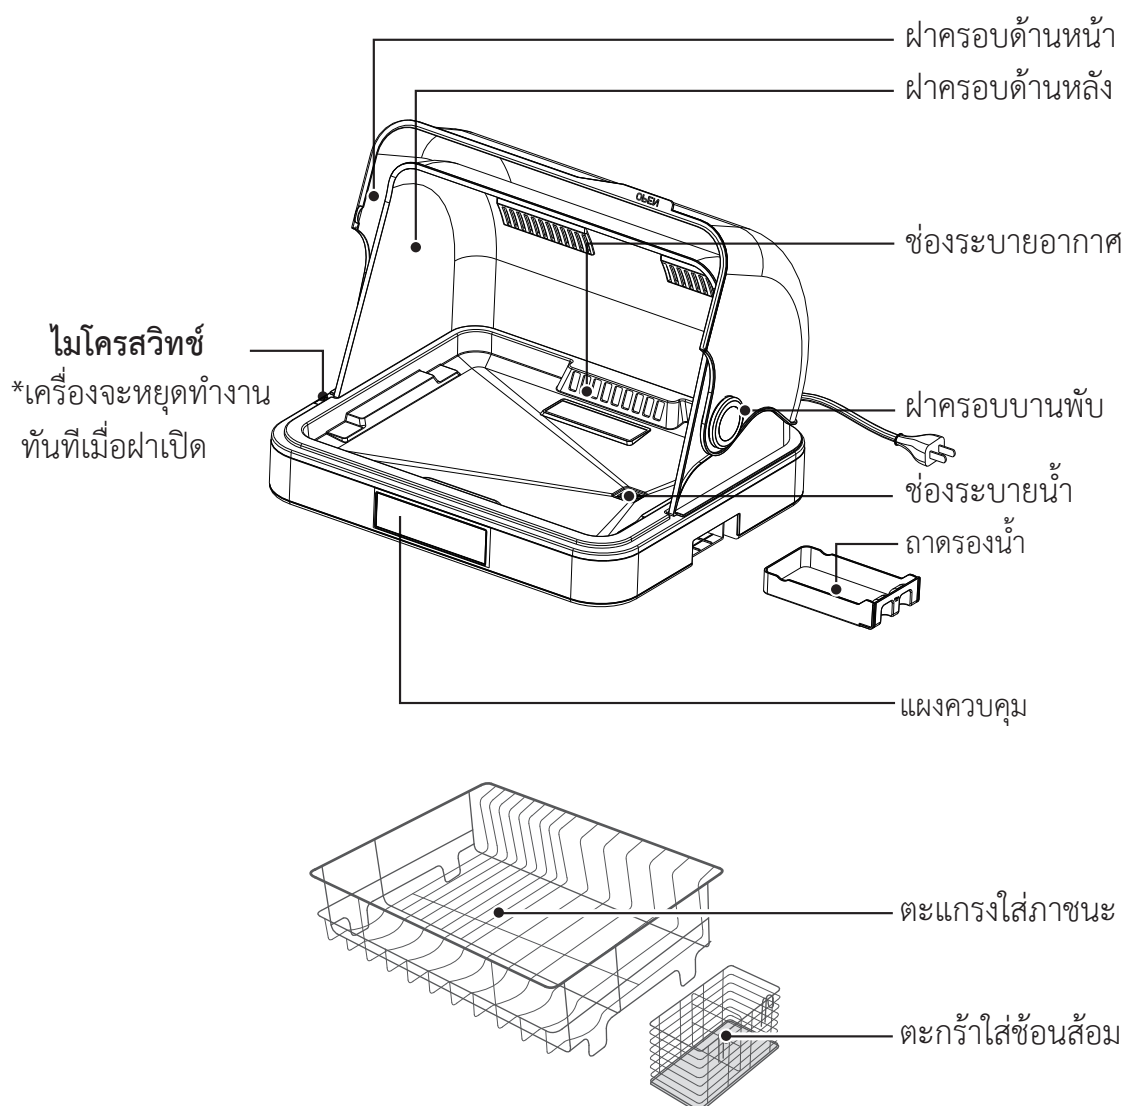

คำแนะนำการใช้งานเพื่อความปลอดภัย

- ก่อนการใช้งาน กรุณาอ่านคู่มือการใช้งานโดยละเอียด เพื่อการใช้งานที่ถูกต้อง
- คำแนะนำการใช้งานเพื่อความปลอดภัยนี้ เพื่อให้ใช้เครื่องอบจานอย่างปลอดภัยและถูกต้อง และเพื่อป้องกันการเกิดอันตรายและความเสียหายต่อผู้ใช้และผู้อื่น โดยระบุถึงอันตรายและความเสียหายและข้อควรระวังที่อาจเกิดขึ้น แยกเป็น 2 ประเภท: "คำเตือน" และ "ข้อควรระวัง" ควรปฏิบัติตามคำแนะนำอย่างเคร่งครัดเพื่อความปลอดภัย

 คำเตือน	ควรปฏิบัติอย่างเคร่งครัดเพื่อป้องกันการเกิดอุบัติเหตุหรือบาดเจ็บ หรืออันตรายต่อชีวิต
 คำแนะนำ	ควรปฏิบัติอย่างเคร่งครัดเพื่อป้องกันการเกิดอุบัติเหตุ หรือความเสียหายต่อทรัพย์สิน

คำแนะนำเพื่อความปลอดภัย

	• ทำความสะอาดสายไฟและปลั๊กไฟ เช็ดฝุ่นและทำความสะอาดสายไฟและหัวปลั๊กสม่ำเสมอ เสียบปลั๊กไฟที่มีฝุ่นอาจทำให้เกิดไฟฟ้าลัดวงจรได้ • เสียบปลั๊กไฟเข้าเต้ารับให้แน่นสนิท การเสียบปลั๊กไม่แน่นสนิท อาจทำให้อันตรายจากไฟฟ้าได้ • ควรเสียบปลั๊กตัวเครื่องเข้ากับเต้ารับโดยตรง ไม่ควรใช้สายต่อรางปลั๊กหรือปลั๊กพ่วง หากใช้รางปลั๊กหรือปลั๊กพ่วงร่วมกับเครื่องใช้ไฟฟ้าอื่น อาจทำให้เครื่องทำงานไม่ปกติและเกิดอันตรายได้
	• ไม่ควรให้เด็กเข้าใกล้หรือเล่นปลั๊กไฟ เพราะอาจเกิดอันตรายได้ • ไม่ควรปล่อยให้สายไฟชำรุด หัก บิดงอ ดึงสายไฟ หรือให้วัตถุมีน้ำหนักทับสายไฟ หรือปล่อยให้สายไฟใกล้ความร้อนโดยตรง เพราะอาจทำให้สายไฟชำรุดและเกิดอันตรายได้ • รางสายไฟหรือปลั๊กไฟชำรุด หรือปลั๊กเสียบไม่แน่นสนิทกับเต้าเสียบ เพราะอาจเกิดอันตรายจากไฟฟ้าช็อตได้ • ไม่ควรใช้เครื่องอบจานใกล้วัตถุหรือวัสดุที่ติดไฟง่าย เพราะอาจทำให้เกิดอันตรายได้ • ไม่ควรให้เด็กใช้เครื่องอบจานลำพังโดยไม่มีผู้ใหญ่ดูแล เพราะอาจเกิดอันตรายได้

ข้อควรระวังเพื่อความปลอดภัย



- ควรปล่อยให้เครื่องเย็น แล้วจึงทำความสะอาดเครื่องอบจาน
ทำความสะอาดขณะเครื่องร้อนอาจทำให้โดนลวกได้

- ควรจับที่หวัปลั๊กไฟเมื่อต้องการถอดปลั๊ก ไม่ควรดึงที่สายไฟ
การดึงสายไฟเมื่อต้องการถอดปลั๊กอาจทำให้เกิดอันตรายได้



- ถอดปลั๊กออกทุกครั้งเมื่อไม่ได้ใช้งานเครื่องอบจาน



- ไม่ควรวางใกล้เตาแก๊สหรือเครื่องทำความร้อน
อาจทำให้เครื่องทำงานผิดปกติหรืออาจเกิดติดไฟได้



- ไม่ควรสัมผัสภาชนะทันทีเมื่อเครื่องหยุดทำงาน
- ควรวางเครื่องอบจานในพื้นที่ราบแนวนอน
- ไม่ควรวางใกล้เปลวไฟ เตาแก๊ส หรือในพื้นที่เดียวกับถังแก๊ส หรือพื้นที่เสี่ยงที่สัมผัสกับเปลวไฟ
- ทำความสะอาดหวัปลั๊ก ไม่ควรให้มีฝุ่นเกาะหวัปลั๊กไฟก่อนเสียบเข้าเต้าเสียบ
- ไม่ควรปิดช่องระบายอากาศออกด้านบน ไม่ควรใช้ผ้าคลุมขณะใช้งาน
- ไม่ควรใส่ภาชนะพลาสติกที่ไม่ทนความร้อนหรือถุงพลาสติกในเครื่องอบจาน

ก่อนเริ่มใช้งาน:

- สำหรับการใช้งานครั้งแรกและเพื่อประสิทธิภาพการทำงานสูงสุดก่อนการใช้งานควรทำความสะอาดตะแกรงใส่ภาชนะ
ลอกพลาสติกกันรอยบนตัวเครื่องออก อบเครื่องทิ้งไว้เป็นเวลา 60 นาที ปลั๊กทิ้งไว้จนเครื่องเย็นลง แล้วจึงเริ่มใช้งาน
- ทำความสะอาดตะแกรงใส่ภาชนะก่อนใช้งาน และควรวางภาชนะในตำแหน่งที่เหมาะสมก่อนเริ่มอบจาน

ขณะใช้งาน:

- ไม่ควรมีสิ่งใดขวางกั้นช่องระบายอากาศ
- ไม่ควรคลุมเครื่องด้วยผ้า ในระหว่างที่เครื่องกำลังทำงาน
- ควรระมัดระวังไม่สัมผัสหรือจับบริเวณช่องระบายอากาศ เพื่อหลีกเลี่ยงอุบัติเหตุที่อาจเกิดขึ้นได้
- หากเครื่องมีอาการผิดปกติใดๆ หรือเสียในระหว่างใช้งาน ให้หยุดการใช้งานทันที และติดต่อศูนย์บริการ
02-493-6565 , servicecenter@penk.co.th

หลังการใช้งาน:

- ไม่ควรเปิดฝาทันทีเมื่อเครื่องหยุดทำงาน ควรปล่อยทิ้งไว้ 10 นาทีจึงเปิดฝาทันที เพื่อหลีกเลี่ยงอันตรายจาก
ความร้อนภายในเครื่อง
- ควรปิดเครื่องและถอดปลั๊กทุกครั้งหลังเลิกใช้งาน
- หมั่นตรวจเช็คและบำรุงรักษาเครื่องทุกๆ สัปดาห์ เพื่อความปลอดภัยและประหยัดพลังงาน และควรถอดปลั๊กออก
หากไม่ได้ใช้งานเป็นเวลานาน
- ควรวางเครื่องอบจานในที่แห้งอากาศถ่ายเทได้สะดวก ไม่ควรปล่อยให้เด็กเล็กเล่นเครื่องหรือใช้งานตามลำพัง
เพื่อหลีกเลี่ยงการเกิดอันตรายจากอุบัติเหตุและถูกไฟฟ้าดูดที่อาจเกิดขึ้น

คำเตือนและข้อควรระวัง


1. บุคคลที่มีความบกพร่องทางร่างกาย หรือที่เสื่อมสภาพทางร่างกายหรือประสาทสัมผัส หรือสภาพจิตใจไม่ปกติ หรือผู้ที่ขาดประสบการณ์การใช้ และความรู้ความเข้าใจ รวมถึงเด็กเล็ก ไม่ควรใช้เครื่องอบจานหากไม่ได้อยู่ภายใต้การดูแลของผู้ใหญ่อย่างใกล้ชิด
2. ไม่ควรปล่อยให้เด็กใช้เครื่องอบจาน และควรแนะนำไม่ให้เด็กเล่นเครื่องอบจานเพื่อความปลอดภัย
3. ห้ามไม่ให้เด็กอายุ 8 ปีขึ้นไป หรือบุคคลที่มีความบกพร่องทางร่างกาย หรือที่เสื่อมสภาพทางร่างกายหรือประสาทสัมผัส หรือสภาพจิตใจไม่ปกติ หรือผู้ที่ขาดประสบการณ์การใช้ และความรู้ความเข้าใจ ใช้เครื่องอบจานนี้ นอกจากจะได้รับการดูแล หรือคำแนะนำในการใช้งานที่ถูกต้อง และอยู่ภายใต้การดูแลของผู้ใหญ่อย่างใกล้ชิด
4. ไม่ควรให้เด็กทำความสะอาดหรือทำการบำรุงรักษาเครื่องนี้โดยลำพัง หากไม่อยู่ภายใต้การดูแลของผู้ใหญ่
5. ไม่ควรทำความสะอาดเครื่องอบจานด้วยน้ำยาที่เป็นตัวทำละลายหรือแปรงขัดจาน ก่อนใช้งานควรล้างทำความสะอาดตะแกรงวางภาชนะ วางภาชนะให้เรียบร้อยเพื่ออบแห้งและฆ่าเชื้อ และปฏิบัติตามคำแนะนำการใช้งานอย่างเคร่งครัด
6. ไม่ควรใช้งานเมื่อมีปัญหาสายไฟขัดข้อง ติดต่อศูนย์บริการเพื่อดำเนินการแก้ปัญหา
7. ไม่ควรใช้เครื่องกับภาชนะที่มีการเคลือบผิวด้วยแลคเกอร์ หรือทำจากเรซิน ภาชนะที่ไม่ทนความร้อน หรือภาชนะที่ทำจากวัสดุที่ติดไฟได้ ทั้งนี้เพื่อหลีกเลี่ยงการเกิดอุบัติเหตุที่อาจเกิดขึ้นได้
8. ใช้ผ้าชุบน้ำหมาดๆ เพื่อเช็ดเครื่องทั้งด้านในและด้านนอก หากเครื่องสกปรกมากให้เช็ดด้วยน้ำสบู่ แล้วใช้ผ้าชุบน้ำหมาดๆ เช็ดสิ่งสกปรกออก และเช็ดซ้ำอีกครั้งด้วยผ้าแห้ง เทน้ำที่ขังอยู่ในถาดรองน้ำออกเพื่อหลีกเลี่ยงน้ำล้นจากถาด

1. ตรวจสอบเช็คสภาพเครื่องน้ำ

- เทน้ำในถาดรองน้ำทิ้งก่อนการใช้งาน
- ใส่ถาดรองน้ำที่ตัวเครื่องอบจาน ตรวจสอบว่าเข้าล็อกแน่นสนิท

2. การวางภาชนะ

- วางภาชนะที่ล้างแล้ว เทน้ำออกจากภาชนะให้หมด ก่อนวางในตะแกรงเครื่องอบจาน (เพื่อป้องกันให้น้ำล้นถาดรองน้ำ ควรเทน้ำออกจากภาชนะให้หมดก่อนวางในตะแกรง)
- ไม่ควรใช้งานผิดประเภท ใช้สำหรับอบภาชนะเท่านั้น
(หากใช้งานผิดประเภท เป็นเหตุให้เครื่องทำงานผิดปกติ บริษัทฯ ขอสงวนสิทธิ์ในการยกเลิกการรับประกันสินค้า)




3. ปิดฝาครอบด้านหน้าให้สนิท


- ตรวจสอบว่าฝาหน้าเครื่องปิดสนิท

4. เสียบปลั๊กไฟกับเต้าเสียบให้แน่นสนิท

5. เลือกคำสั่งการทำงาน และตั้งเวลาการทำงาน

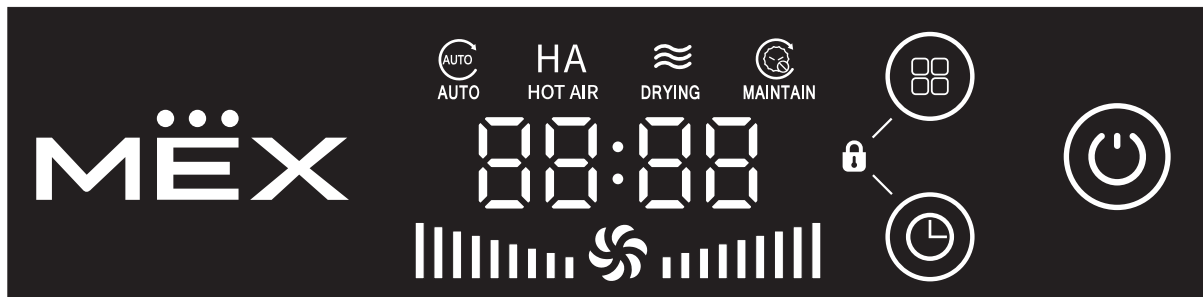

แผงควบคุมการใช้งาน

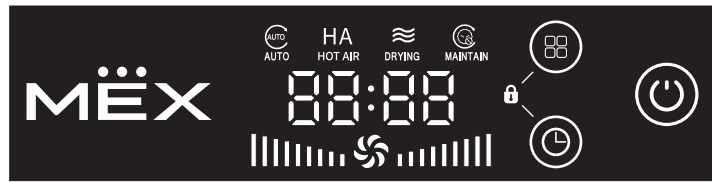

1. การเปิดเครื่อง

เมื่อเสียบปลั๊กไฟ ไฟ LED ที่แผงควบคุมจะสว่างขึ้นทุกดวง และไฟ LED จะดับหลังจาก 1 วินาที ยกเว้นปุ่มเปิด/ปิด ไฟจะติดอยู่ (ไฟหรี) และเครื่องจะอยู่ในสถานะพร้อมใช้งาน (โหมดสแตนด์บาย/STANDBY MODE)

2. การใช้งานคำสั่งการทำงานต่างๆ

1. แตะปุ่มเปิด/ปิด “” ไฟสัญลักษณ์หน้าที่การทำงาน (function) จะสว่างขึ้น แตะปุ่มการทำงาน (Function button) “” เพื่อเลือกคำสั่งการทำงาน:



เมื่อเปิดเครื่องแล้วไม่เลือกคำสั่งการทำงานหลังจาก 5 วินาที เครื่องจะปรับเป็นคำสั่งทำงานออบัตโนมติ

2. ออบัตโนมติ :

- 2.1 แตะปุ่มการทำงาน (Function button) “” เลือกคำสั่ง “ออบัตโนมติ”

ไฟสัญลักษณ์ “” จะสว่างขึ้น หน้าจอจะแสดงเวลา “00:41”

- 2.2 เลือกเวลาที่ต้องการในการอบโดยแตะที่สัญลักษณ์นาฬิกา “” สามารถเลือกเวลาได้ 3 ระดับ 41, 51 และ 61 นาที หน้าจอจะแสดงผล “00:41”, “00:51” และ “00:60” ตามเวลาที่เลือก

- 2.3 หากไม่มีการเลือกคำสั่งใดๆ หลังจากนั้น 5 วินาที เครื่องจะเริ่มอบจานโดย พัดลม, ขดลวดความร้อน จะทำงานตามที่ตั้งไว้พร้อมกัน เครื่องจะหยุดทำงานอัตโนมัติเมื่อหมดเวลาที่ตั้ง

3. ออบลมร้อน :

- 3.1 แตะปุ่มการทำงาน (Function button “” เลือกคำสั่งออบลมร้อน ไฟสัญลักษณ์ “” จะสว่างขึ้น ไฟหน้าจอจะแสดงเวลา “00:11”

- 3.2 เลือกเวลาที่ต้องการในการอบโดยแตะที่สัญลักษณ์นาฬิกา “” สามารถเลือกเวลาได้ 3 ระดับ 11, 16 และ 21 นาที หน้าจอจะแสดงผล “00:11”, “00:16” และ “00:21” ตามเวลาที่เลือก

- 3.3 หากไม่มีการเลือกคำสั่งใดๆ หลังจากนั้น 5 วินาที เครื่องจะทำงานออบลมร้อน เครื่องจะหยุดทำงานอัตโนมัติเมื่อหมดเวลาที่ตั้ง

4. อบแห้ง : DRYING

4.1 กดปุ่มการทำงาน (Function button) “” เลือกคำสั่งอบแห้ง ไฟสัญลักษณ์ “” จะสว่างขึ้น ไฟหน้าจอจะแสดงเวลา “00:31”

4.2 เลือกเวลาที่ต้องการในการอบโดยแตะที่สัญลักษณ์นาฬิกา “” สามารถเลือกเวลาได้ 3 ระดับ 31, 41 และ 51 นาที หน้าจอจะแสดงผล “00:31”, “00:41” และ “00:51” ตามเวลาที่เลือก


4.3 หากไม่มีการเลือกคำสั่งใดๆ หลังจากนั้น 5 วินาที เครื่องจะเริ่มทำงานโดยลดอุณหภูมิและความร้อน และพัดลมจะทำงานและหยุดเองอัตโนมัติ เมื่อครบเวลา

5. เก็บงานในเครื่อง: MAINTAIN

กดปุ่มการทำงาน (Function button) “” เลือกคำสั่งเก็บงานในเครื่อง

ไฟสัญลักษณ์ “” จะสว่างขึ้น ไฟหน้าจอแสดงเวลา “72:00” ใน 2 ชั่วโมงแรก เครื่องอบอัตโนมัติ 30 นาที (เครื่องจะเริ่มอบงานโดยพัดลม, ลดอุณหภูมิและความร้อน จะทำงานตามที่ตั้งไว้พร้อมกัน)

หลังจากนั้นทุกๆ 2 ชั่วโมง เครื่องจะทำงานโดยอบลมร้อน 5 นาทีและอบแห้ง 5 นาที เป็นเวลารวมทั้งสิ้น 72 ชั่วโมงเครื่องจะหยุดทำงานอัตโนมัติเมื่อหมดเวลาที่ตั้ง

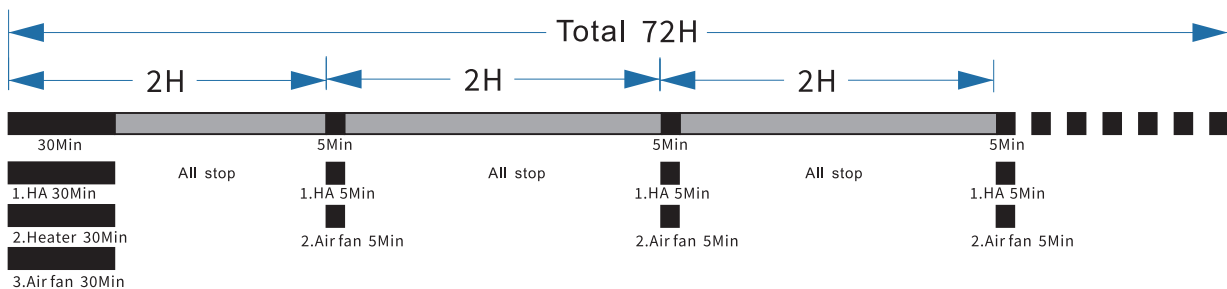

3. ไฟสัญลักษณ์แสดงการทำงาน

ขณะที่เครื่องทำงาน ไฟแสดงสถานะการทำงานจะสว่างขึ้น เพื่อแสดงการทำงานของเครื่อง โดยจะวิ่งจากกึ่งกลาง ขยายไปด้านข้างตามลำดับ และในคำสั่งที่ใช้พัดลมไฟแสดงพัดลมจะหมุนตลอดเพื่อแสดงว่าเครื่องกำลังทำงาน ไฟสัญลักษณ์จะดับลงเมื่อหมดเวลาที่ตั้ง และสัญญาณเสียงจะดังขึ้น 5 ครั้ง



4. ตั้งล็อกปุ่มควบคุม

ตั้งล็อกปุ่มควบคุม กดปุ่มการทำงานพร้อมปุ่มตั้งเวลา “ + ” แตะพร้อมกัน

กดปุ่มการทำงานพร้อมปุ่มตั้งเวลาพร้อมกันอีกครั้งเพื่อยกเลิกการล็อก “ + ” พร้อมกันอีกครั้งเพื่อยกเลิกการล็อก (หากตั้งล็อกปุ่มควบคุม จะไม่สามารถตั้งการทำงานใดๆได้ต้องปลดล็อกก่อน)

การดูแลรักษา

- ถอดปลั๊กออกและปล่อยให้เครื่องอบจานเย็นก่อนทำความสะอาดทุกครั้ง



ไม่ควรใช้สารเคมี เช่น ผงซักฟอกอัลคาไลน์, ผงขัด, เบนซิน, ทินเนอร์, แอลกอฮอล์ ในการทำความสะอาด เพื่อป้องกันการเสื่อมสภาพและการเปลี่ยนสีของตัวเครื่อง

การทำความสะอาด

1. เช็ดด้วยผ้าชุบน้ำหมาดๆ หรือน้ำสบู่หมาดๆ เช็ดด้านในและด้านนอกตัวเครื่อง เพื่อเช็ดสิ่งสกปรกออก
2. เช็ดให้แห้งด้วยผ้าสะอาดอีกครั้ง

การแก้ปัญหาเบื้องต้น

ปัญหา	สาเหตุที่เป็นไปได้	วิธีการแก้ไข
เครื่องไม่ทำงาน	ฝาเครื่องอาจปิดไม่สนิทหรือปุ่มสวิทช์ถูกกดไว้	ปิดฝาคกรอบ
เครื่องไม่ทำงาน	ไม่ได้เสียบปลั๊ก	ตรวจสอบปลั๊กและเสียบปลั๊กให้แน่น
เครื่องไม่ทำงาน	แผงควบคุมอาจเสีย	ติดต่อศูนย์บริการ
อบจานไม่แห้ง	เครื่องทำงานผิดปกติ	ติดต่อศูนย์บริการ
หลอดไฟ LED ไม่ทำงาน	หลอดไฟขาด หรือ ขั้วหลอดไม่แน่น	ติดต่อศูนย์บริการ
ฟังก์ชันการทำงานขัดข้อง	มีการตั้งการทำงานที่ผิด	ติดต่อศูนย์บริการ

Characteristic	2
Components	2
Safety precautions	3
Safety precautions of daily use	5
How to use	6
Care	9
Common faults and treatment methods	9

Dear valued customers,

Thank you for purchasing MEX dish dryer. To operate it safely and achieve the best result, please read Instruction Manual carefully before you start using it. We hope you will like and enjoy our product as we greatly value customer's satisfaction in all of our products.

The dish dryer is safe and convenient to use. MEX dish dryer is made to provide more safety protection system by having the best quality materials. The cover is design with transparent grey colour for better maintenance.


Please place all your clean kitchen utensils into the racking accordingly in order.

Just select function button, select timer button to start drying the kitchen utensils. The LED light will be switched on while operating with hot air heat up to 70 degree for Automatic and drying function. Our racking is using 304# stainless steel to ensure the safety of the quality. The unit is suitable for 4 to 6 family members.

CHARACTERISTIC

Product Name	DISH DIRYER
Product Model	DM60E-1
Rated Voltage / Power	220V-240V 50Hz / 260W
Volume	60L
Work Temperature	70 +/- 5°C
Basket Bearing Capacity	15Kg
Unit Dimension	495x409x362mm
Net Weight	5.0kg

COMPONENTS

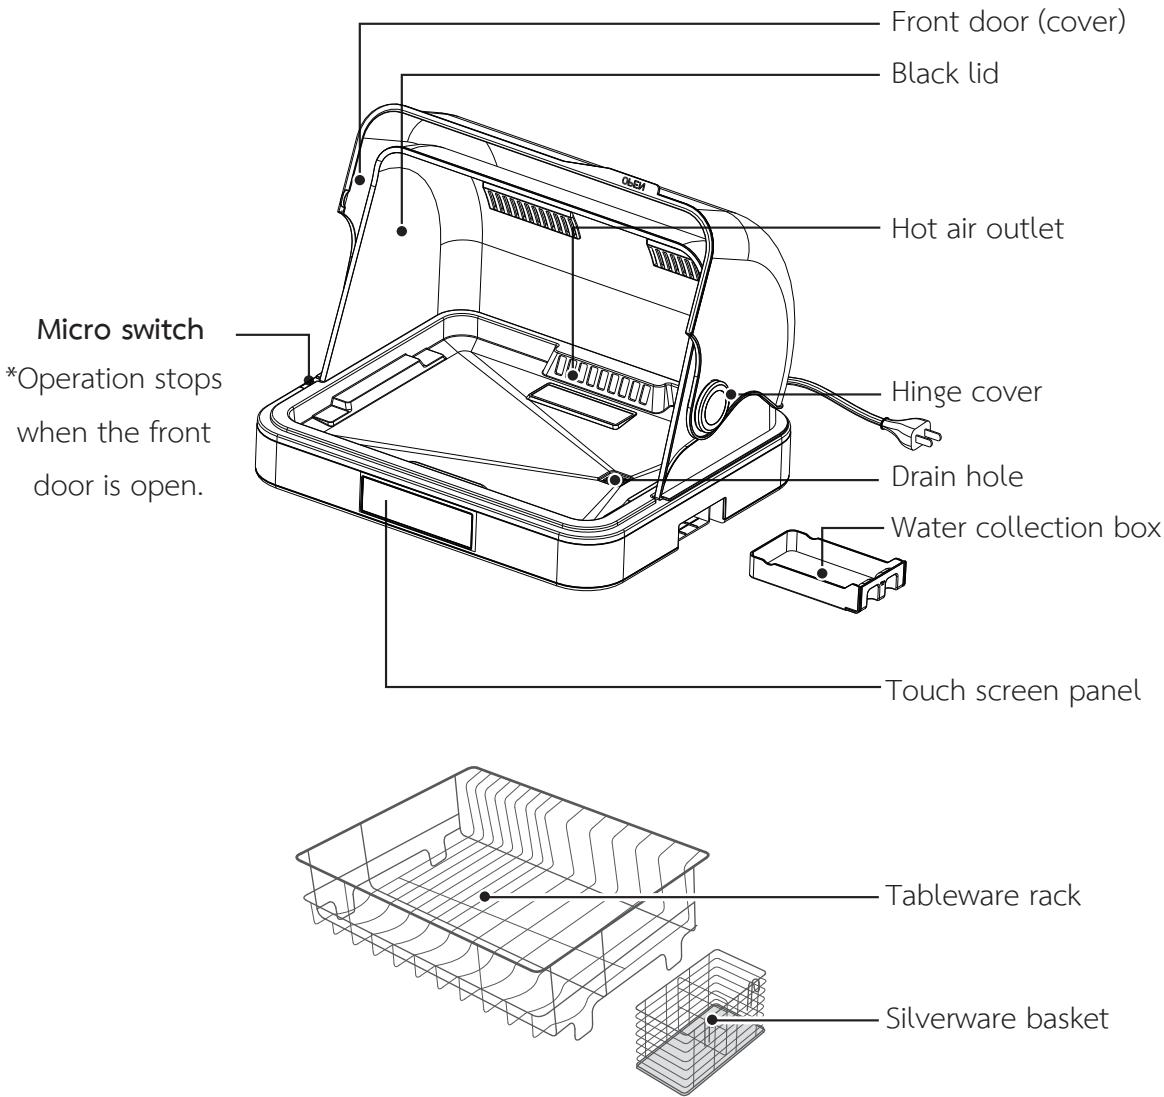

SAFETY PRECAUTIONS

- Before using, please read this “Safety Precautions” manual carefully in order to use the product correctly.
- The precautions shown here are intended to ensure the safe and correct use of the product and to prevent harm and damage to the user and other people. To clearly indicate of harm and damage and the level of urgency, the precautions that may be caused by incorrect handling are classified into two categories: “Warning” and “Caution”. Please make sure to follow them as all items are important for safety.

 WARNING	Items that may potentially cause death or serious injury when handle incorrectly
 CAUTION	Items that may cause injury to the user or damage to property when handled incorrectly

 WARNING

	• Clean the power plug Wipe off any dust on the power plug prongs and mounting surface. Inserting the power plug with dust may cause a short circuit or fire. • Insert the power plug all the way into the outlet. Failure to do so may cause an electric shock, short circuit, fire or smoke.
	• Use a power outlet without connected device, Do not use an extension cord. If the products us used together with other equipment, the branching power outlet may produce an unusual amount of heat and cause of fire.
	• Keep infants away from the power plug. Failure to do so may cause an electric shock or injury.
	• Do not damage, break, modify, forcibly bend, pull, twist, use springs, place heavy objects, pinch, nor bring the power cord close to hot parts. Failure to do so may cause a fire or electric shock. • Do not use if the power cord or plug is damaged or loosely inserted into the outlet. Failure to do so may cause an electric shock, short circuit or fire. • Do not use near flammable materials such as curtains. There is risk of fire. • Do not let children use the product unattended, nor use it within the reach of infants. There is a risk of burns, electric shock and injury.

SAFETY PRECAUTIONS

CAUTION



- **Clean after the product has cooled down.**

Touching the hot parts may cause burns.

- **When disconnecting the power plug, always hold the power plug at the end and pull it out without pulling the power cord.**

Failure to do so may cause an electric shock or short circuit and then cause a fire.



- **Disconnect the power plug from the outlet when not in use.**

Failure to do so may result in injury, burns, electric shock due to deterioration of the insulation, and fire due to short circuit.



- **Do not place where gas stove or hot air hits.**

Failure to do so may cause a fire and deformation.



- **Do not touch the hot tableware during use or immediately after use.**

Failure to do so may cause burns.

Request for use

- Put the dish dryer on horizontally place.
- Don't use at near the flame or a gas stove and the location which have the gas container. and the sprayer can.
- Wiped up power plug when dust is stuck between the blade and blade.
- Don't close the Exhaust holes on top of cover such kind of cloth.
- Don't put weak plastic tableware to heat and plastic bag into the unit

SAFETY PRECAUTIONS OF DAILY USE

BEFORE USE:

- For the first use, scrub the chamber, remove the protective film, dry the machine for 60 min, put the tableware into it for drying purpose and after cooling in order to achieve better use effect.
- Clean the bowl basket before use; place the tableware well before operating.

IN USE:

- Don't block the vents on both sides.
- Don't cover the machine with duster cloth or other scrubbing items.
- Don't touch the thermos vent with hands to avoid accidents.
- If the machine breaks down in use, stop using it immediately. Contact our service at 02-493-6565 during working hours or servicecenter@penk.co.th

AFTER USE:

- Do not open the cover around ten minutes after use as the air is hot. Unplug the power plug or turn off the power after use.
 - Suggest to regularly maintaining the dish dryer every week. For safety and energy saving, unplug the power plug if the unit is not used for a long time.
 - Put the dish dryer into a dry ventilated place. Don't let kids use the machines alone to avoid scald, electric shock or other accidents.
1. The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction
 2. Children are advised not to play with the appliance
 3. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved
 4. Cleaning and user maintenance shall not be made by children without supervision
 5. Don't clean the machine with organic solvent or dish brush etc. Clean the bowl basket before use. Put the tableware well to dry and disinfect. Use the machine according to operation instruction
 6. Don't use the impaired power lines (like cutting-off, hot wires). For security, contact the service center to solve if the power line is impaired. Do not dismantle the machine or change the parts by yourself
 7. Don't use the product to dry lacquer ware, resin (stuff which is easy to change under high temperature), flammable and combustible, etc. to avoid accidents
 8. Don't wash the machine body with water or spray it. Use the wet cloth to scrub the inside and outside surface of the machine body. If it is too dirty, first scrub it with neutral detergent, next scrub it with clean wet cloth and finally scrub it with dry cloth. Dispose the water in the water collection box and avoid overflow

HOW TO USE

1. Check the water collection box

- Discard the water in the water collection box before use.
- Set the water collection box on the body.

2. Storing tableware

- Drain the washed dishes well before putting them inside this dish dryer.
(Otherwise, water may overflow from the water collection box)
- Use this as dedicated tableware rack only.
(Using this for other purpose may result to unit malfunction and will void its warranty)


 CAUTION	• Do not put knife / knives inside the appliance Doing so may cause injury
--	--

3. Close the front door


- Make sure the front door is closed.

4. Plug the power plug into the outlet

5. Operating mode and set the timer

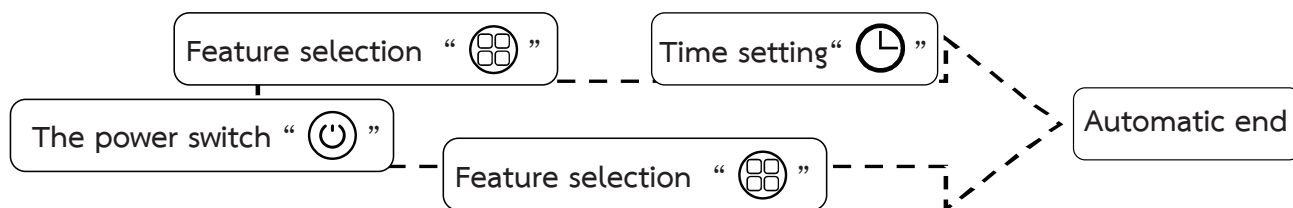

Product panel diagram:

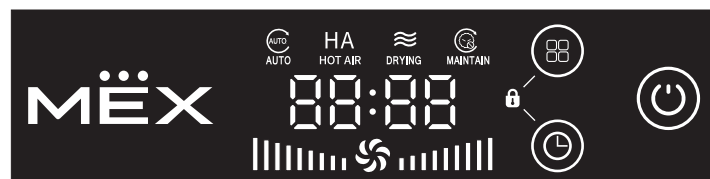

1. Power on:

In the process of power on, all indicator lights on the LED screen will be on.

After 1 second, the LED screen will be off and put into standby mode.

2. Power on and functions:

1. Press the on/off button “
 - 1.1 Press the function button “

AUTO

HA

HOT AIR



DRYING



MAINTAIN

Mode: automatic, hot air, drying, storage/maintain.

- 1.2 5 seconds no button operation, enter automatic mode.

2. Automatic mode: **AUTO**

- 2.1 Press the function button “
 - 2.2 Press the time button “
 - 2.3 5 seconds no button operation started to work, time countdown. Complete work and move to standby. (fan and heating function simultaneously)

3. HOT AIR mode: **HA** **HOT AIR**

- 3.1 Press the function button “
 - 3.2 Press the time button “
 - 3.3 5 seconds no button operation started to work, time countdown. Complete work shift to standby. The HOT AIR work.

HOW TO USE

4. Drying mode: DRYING


4.1 Press the function button “” to select drying mode “”, indicator light “” will turn on full light, timer “00:31” will display on the screen

4.2 Press the time button “” to select time from 31, 41 and 51 minutes, “00:31”, “00:41” and “00:51” minutes will display in order.

4.3 5 seconds no button operation started to work, time countdown. Complete work shift to standby. Fan and heating function work.

5. Storage/maintain mode:

5.1 Press the function button “” to select drying mode “”, indicator light “” will turn on full light, timer “72:00” will display on the screen. In the first 2 hours, all functions work for 30 minutes and then HOT AIR and fan work for 5 minutes every 2 hours.

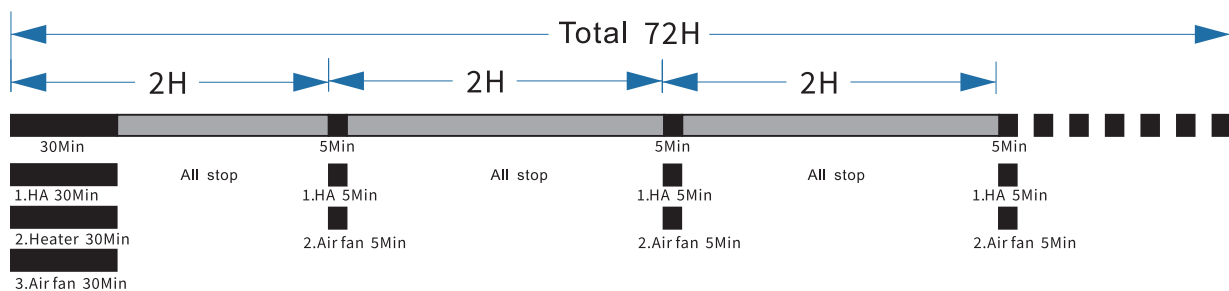

3. Working process display

1. When working, the light bar will be lit one by one from the middle to both sides, and the cycle will continue until the work is finished. When the work is finished, the buzzer will ring 5 times.
2. When the fan works, the fan sign starts to rotate and circulate until the work is finished.

4. Child lock function

Child lock function, press (simultaneously press function key and time key) combination key to start child lock function and the child lock indicator light is on. In this state, a single key is not responsive. Press the combination key again (simultaneously press the function key and the time key) to cancel the child lock.

CARE

- Please disconnect the power plug from the outlet and allow the product to cool down before cleaning



- Do not use the following items to prevent deterioration and discoloration.

Alkaline detergent, abrasive, benzene, thinner, alcohol

Cleaning the main unit

1. Wipe off with a soft cloth dampened with diluted kitchen detergent
2. Wipe again with a dry towel

Do not wash with water directly on the main unit.

Please keep your tableware and chopsticks basket on a regular basis.

COMMON FAULTS AND TREATMENT METHODS

Confirm and solve the common faults according to the instructions below. Before requesting for repairs, please check the following. If you could not solve or confirm the fault causes, contact service center at 02-817-8999. We especially remind you not to dismantle or repair the machine for your security.

Faults	Causes	Treatment methods
Unable to work	• Cover is not closed well	Close the cover well
	• The power failure • Plug (power cord) not plugged in tightly	Plug it well with tightly
Unable to dry	• Electrical machinery/computer board failure • Bad contact of heating part	Repair or change by service center only
LED lamp tube failure	• Light tube failure • Bad contact of terminal	Repair or change by service center only

- If any problem persists after checking above, immediately disconnect the power plug from the outlet and contact our service at 02-817-8999 during working hours or service2@penk.co.th



PEN K INTER TRADING CO., LTD.

HEAD OFFICE : 1000/63-64 PB TOWER. 16th Floor. Sukhumvit 71 Road, North Klongtan,
Wattana, Bangkok 10110 TEL 0-2493-6565 FAX 0-2391-1141

SERVICE CENTER : 63/3 Moo 6 Soi Suksawat 76, Bangchak, Phra Pradaeng, Samut Prakan 10130
TEL. 0-2493-6565 FAX : 0-2464-1600 E-Mail : servicecenter@penk.co.th

SALE OFFICE : 0-2493-6565